



Your ballcups can be adjusted to limit the play on your balljoints. Use a M3 setscrew and screw it in your ballcups first.

Adjustable Ballcup

Ballcup adjustment:

- 1 - Snap the ballcups on the balljoints.
- 2 - Screw th M3 setscrew in the ballcupss.
Use them to limit the play on the balljoints,
but make sure the balljoints can still move
freely in the ballcups.
- 3 - Now attach to the turnbuckles and adjust to
the required length.

